


Thank you very much for purchasing our product.  
Before using it, please read through this manual carefully for tips on proper handling and use.

## User Manual

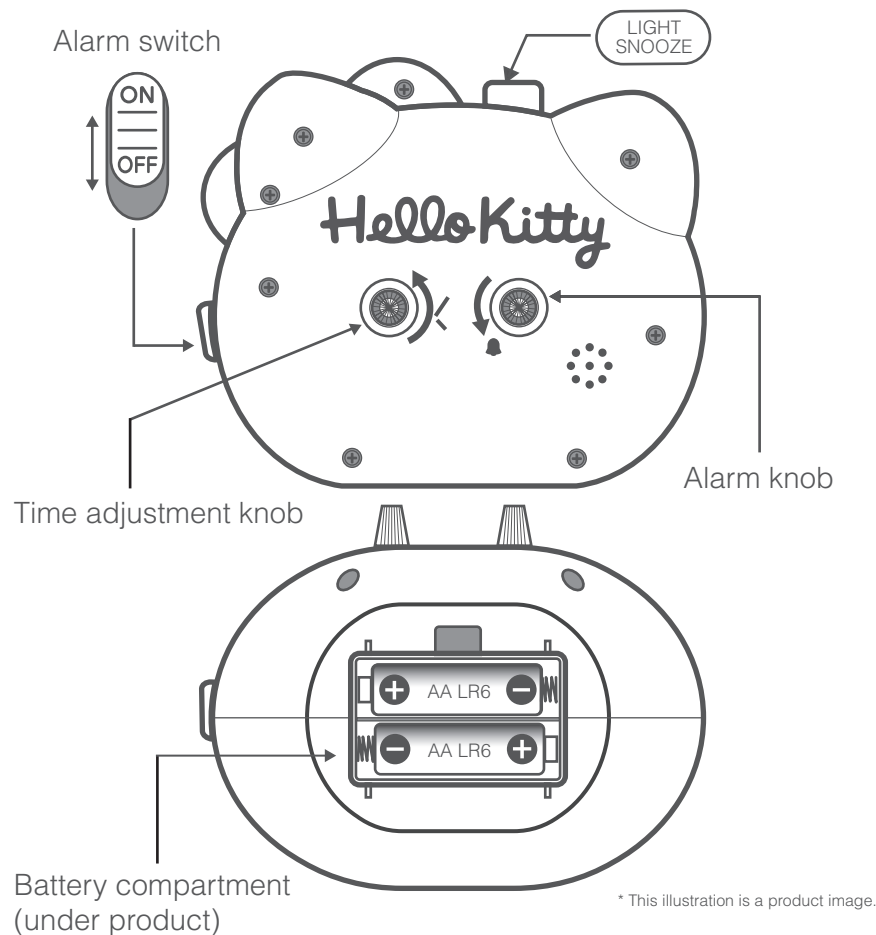

### Inserting batteries

- Remove the cover of the battery compartment, located underneath the clock base, by pulling it towards you, then insert two AA dry cell batteries as indicated by the plus/minus signs shown inside the compartment.

## Product Care

- To clean the clock, wipe it down with a soft cloth.
- Do not use benzine, paint thinner, or polishing powders/detergents.

## Product Specifications

Time precision : Accurate within +/-30 seconds per month (at normal temperature)  
 Temperature range for use : -10 to +50 deg. C  
 Batteries required : AA dry cell batteries x 2 (sold separately)

### ⚠ Warning Read carefully before use.

#### <Batteries>

- \* Be sure to change dead batteries quickly to avoid leakage. Battery leakage may damage the clock or soil surrounding furniture, etc. incurring costs for repairs. Take the following measures to prevent battery leakage, heat, or damage.
- Improper use of dry cell batteries may cause leakage, unwanted heat, or damage.
- Do not use rechargeable batteries with this product.
- Do not mix different types of batteries for use, such as old and new.
- If the clock stops working, or the alarm no longer activates, quickly replace batteries with the correct type, or remove the batteries completely.
- Replace them once a year even if they continue to work.

#### <Warranty>

- In rare cases of product malfunction within the period of warranty, notify the store of purchase or the Sanrio Customer Center, and show the warranty card.
- Warranty coverage is limited to what is stated on the card.

#### <Area of use>

- \* Refrain from using this product in the following areas, which could cause it to malfunction.
- Areas where frequent vibrations or hard shocks often occur, moist areas such as bathrooms, etc.
- Areas with a strong magnetic force, or where lots of dust accumulates
- In direct sunlight
- Areas where exposed to direct wind from heater

#### <Functions>

- When setting the clock or alarm, turning the appropriate knob in the opposite direction of the arrow may cause the time or alarm to function slower than normal. So be sure to turn each knob in the proper direction.

### Setting the time

- Turn the time adjustment knob in the direction of the arrow to set the time.

### Setting the alarm

- ① Slide the alarm's ON/OFF switch to its ON position.
- ② Turn the alarm knob in the direction of the arrow to align the alarm needle with the time you would like it to activate.
  - Electronic alarm sounds (4 types)
    - Rhythm of the Rain
    - You Are My Sunshine
    - A Time for Us (a melody from Romeo and Juliet)
    - If You Love Me
- ③ To stop the alarm, slide its ON/OFF switch to the OFF position.
  - \* When turning OFF the alarm, Kitty will talk.
    - Kitty's phrases (4 types)
      - If you're happy, then I'm happy
      - I hope something great happens today
      - I've got a feeling something good will happen today
      - Have a day filled with fun

### Snooze function

- Pressing the LIGHT / SNOOZE button while the alarm is activated will put the alarm into snooze mode.
- The alarm is shut off, but will be activated again about 4 minutes later. (The electronic alarm sound activated 4 minutes after snooze will differ each time.)
- To turn off the alarm completely, slide the ON/OFF switch to the OFF position.
- The snooze function can be used for about 30 minutes from when the alarm is first activated. This varies slightly depending on the time setting.
- \* Kitty will not speak when using the LIGHT / SNOOZE button to stop the alarm.

### LIGHT / SNOOZE button

- Press this button to turn on the light.
- The light can be switched on approximately 15 thousand times.
- However, the light cannot be replaced.