 


<MSM150>
Stainless Steel Portable Thermos
User Manual

Thank you for purchasing the stainless steel portable thermos. Please read through these instructions carefully for proper handling before use. Be sure to store this instruction manual for future reference.

Part Names

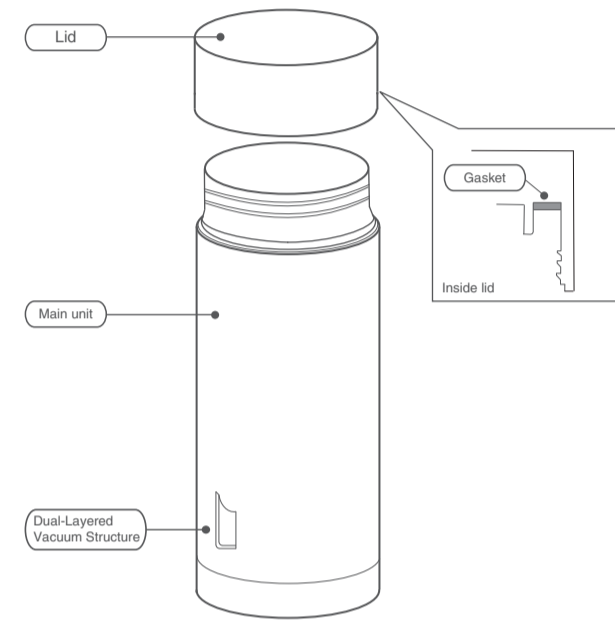

Actual volume 0.15 ℓ

Product Care Be sure to always perform product care after use so that it can be clean and ready for use at any time.

 
- Main unit** Use a mild dish detergent diluted with hot water and a sponge to wash. Rinse sufficiently with water to remove detergent from the product. Immediately after that, thoroughly wipe the water away with a dry cloth.
- Please refrain from using alkaline detergent or orange oil detergent, as it could cause the pattern/design to peel off, or result in discoloration.
- Lid** After washing, thoroughly wipe the water away with a dry cloth. Be sure the gasket is attached securely after product care.

- <Caution>**
- Do not use an automatic dishwasher or dish dryer.
 - Do not "set to soak" when washing this product. (Doing so may cause water to seep into the cracks of the product, causing it to leak while in use, and possibly soiling property.)

Although this product is made of stainless steel, water quality or impurities may cause red, rust-like spots to appear in some cases. If this occurs, fill it with hot water containing approximately 10% vinegar, wait for 30 minutes, then scrub the inside gently with a soft brush, rinse out thoroughly, and dry.

(Storage)
 If you do not intend to use this product for a long period of time, wash it to remove any dirt, dry it thoroughly, and store it in a cool, dry area.

Attaching the Lid Gasket

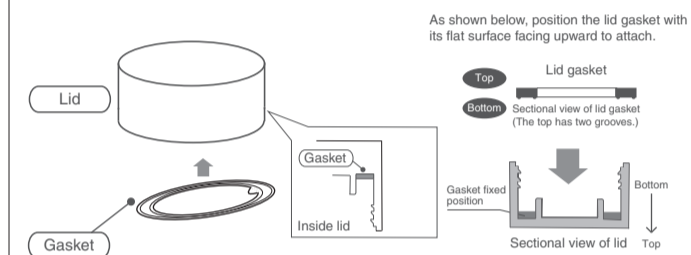

When attaching the lid gasket, be sure to attach it in the right direction. If attached while facing the wrong direction, it may cause liquid to leak from the product.

Troubleshooting

Please inspect as follows. If none of these actions apply, please contact the store of purchase.

Symptom	Inspection	Action
Leakage from lid	Is the lid on tight?	Retighten it securely.
	Is the gasket attached correctly?	Attach it correctly.
	Has the gasket worn down?	Purchase a replacement gasket.

* Gaskets are consumable products. Be sure to check it approximately one year after starting to use the product. If you find it has worn down, replace it with a new part (sold separately).

Safety Precautions

 
- Do not set in an area accessible by toddlers or infants. Also be sure that it is not used for playing or pranks. (This could cause a serious accident such as injury, etc.)
- Only fill water to the line shown in the diagram. (Overfilling may cause liquid to overflow when closing the lid.)
- Do not "set to soak" when washing this product. (Doing so may cause water to seep into the cracks of the product, causing it to leak while in use, and possibly soiling property.)
- Keep away from fire, such as a heater or stove. (Doing so may cause a fire. This may also deform or discolor the product.)
- Do not heat up this product in the microwave. (Doing so may emit sparks, causing malfunction or injury.)
- Although the lid is sealed with a gasket, be sure to set the product upright when filling with liquid and carrying it in a bag, etc. Also, do not carry it in a bag with valuables (such as a mobile phone or camera). (Doing so may cause an unexpected accident, such as soiling of property.)
- Pouring in a hot beverage may cause you to burn yourself, so be careful when doing so, and be sure the beverage has sufficiently cooled before drinking. (The product's insulation will keep its external portion from getting hot, even when a hot beverage is inside.)
- Do not use an automatic dishwasher or dish dryer. (Doing so may deform the product, causing leakage or malfunction.)
- Do not place the main part of this product or its lid in boiling water. (Doing so may deform the product, causing leakage or malfunction.)
- Close the lid securely before use. (Failure to do so may cause its contents to leak out.)
- Do not set this product down on its side. (Doing so may cause its contents to leak out.)
- When using a hot tea kettle, do not allow its metal parts to touch this product.
- Use of this product while driving is dangerous, so be sure to refrain from doing so.

Please note that, if these precautions are not followed correctly, our company will not be held responsible for damage or loss of property.

Safety Precautions

Do not fill product with the following:

- Dry ice, carbonated drinks, etc. (Internal pressure may increase, so that the lid can no longer be opened, or contents could spray out.)
- Milk, beverages containing milk, fruit juice, etc. (The ingredients could spoil.)
- Salty soups, such as miso, etc. (Salt may cause the product to rust.)
- Pulp, tea leaves, etc. (This may lead to product malfunction such as leakage, etc.)

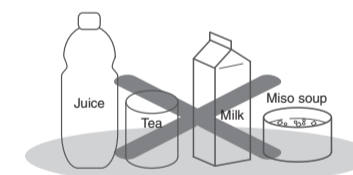

When Using a Drink Holder Mounted inside of a Vehicle

- Check its strength and stability before use. If it is not strong enough, the drink holder may fall off, become damaged, or cause burns, with liquid soiling the car or clothing in some cases.
- When using a commercially-available drink holder, be sure to use one that installs securely to the vehicle and is stationary. Use of a drink holder that suspends from a window or AC vent etc. may fall off in some cases, so please refrain from using the product with this type.

 
Usage Precautions and Requests

- Do not subject the product to significant shock by dropping it or hitting it against something. (If the surface is dented, it may reduce the product's heat-retaining/cooling capabilities.)
- Do not use paint thinner, benzene, metal scrubbers, polishing powder, cleansers, etc. (Doing so may leave scratches or cause rust.)
- If the product's opening is deformed due to dropping it etc., please refrain from using it.
- Do not use chlorine bleach.
- Do not keep contents in the product for a long period of time. (Doing so may result in a change in quality or cause it to spoil.)
- Do not store in the freezer. (Doing so may deform or damage the product.)
- The product may not fit in drink holders made for certain types of cars, or some commercially-available holders.

How to Use

Be sure to wash the lid and main unit before use.

- ① Remove the lid
 Twist the lid in the direction of the arrow to remove it.
- ② Fill with a beverage.
 Pour in the beverage, then close the lid securely.
 * Only fill to the line shown in the diagram. Overfilling may cause the beverage to overflow when closing the lid.

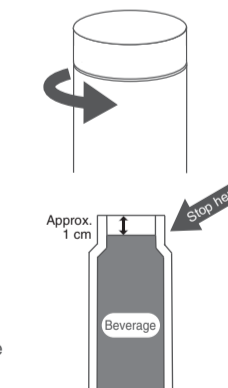

Use the product more efficiently by filling it with a small amount of hot (or cold) water in advance, pre-heating (or pre-cooling) it. Then empty that water and fill the product with new hot (or cold) water.