Read carefully before use

↑ CAUTION

- Never fill the product with a hot beverage. Doing so may cause burns. It could also disfigure the product causing leakage or other malfunction.
- Please refrain from sterilization in boiling water, as this could disfigure the product.
- Do not use a dishwasher or dryer to clean this product, as it may cause disfiguration.
- Do not put in the microwave.
- Do not subject to significant shock by dropping or hitting it against something. This could scratch, disfigure, or damage the product.

Handling Precautions

♠ Keep away from flames. ♠ Cannot be used in freezer to make ice. ♠ Be sure to carefully read all product labels, user manual, etc. before use. ♠ When opening/closing lid, be sure it is positioned correctly, If it is not positioned correctly, the lid may be damaged. ♠ Do not open/close lid forcefully. Doing so may cause damage. ♠ Before setting the product on its side in the refrigerator, etc., be sure its lid is securely closed and that no leakage is occurring. ♠ Richly-colored beverages, or those using artificial colorant may stain the product. ♠ Beverages with a strong odor may cause the product to smell similarly. ♠ Failing to remove oils or fats from the outer pattern/design may cause colors to fade.

Precautions when closing lid


- When placing on its side, close the lid securely so that liquid cannot leak out.
- When using for a long period of time, the spout may slightly change position, but be sure to close it tightly.
- Due to the product's structure, closing the lid immediately after pouring out liquid may cause some liquid to remain inside the threaded portion of the lid (Figure ①). If this occurs, placing the product on its side may cause the liquid trapped inside the threaded portion to leak out. Be sure to completely remove any liquid from the lid's threaded portion before placing the product on its side. (Figure ②)

Figure ① Threaded portion Lid

Product Care

dry before assembling.

 - Add a neutral dish detergent to a sponge or soft cloth to clean the product, rinse off all detergent with warm water, then let it dry thoroughly. Be sure to read the user manual of the sponge and detergent before use. Using a scrub brush, polishing powder, or abrasive material to clean the product may leave scratches. When using an alkaline detergent to clean the product, be sure to rinse it off thoroughly with water so that none remains. Do not use orange oil based detergent. Doing so may degrade the product or cause colors/designs to fade. After washing, be sure all parts are completely
- How to position the gasket
- Make sure gasket is placed correctly before use, and confirm that no leakage is occurring.
- Make sure gasket is placed correctly. If it becomes twisted or contorted, it may cause leakage.
- The gasket is an expendable item. If it becomes damaged, replace with a new one (sold separately).



in the correct position

	Main unit, bottom lid	Lid	Gasket
Raw resin	AS resin	Polypropylene	Silicone rubber
Heat-resistant temperature	100°C	140°C	140°C
Cold-resistant temperature	-30°C	−30°C	-30°C
Volume	1.2 ℓ		