

Be sure the gasket is attached securely after product care.


<Caution>
Do not use an automatic dishwasher or dish dryer. Do not "set to soak" when washing this product. (Doing so may cause water to seep into the cracks of the product, causing it to leak while in use, and possibly soiling property.)

Although this product is made of stainless steel, water qualities or impurities may cause red, rust-like spots to appear in some cases. If this occurs, fill it with hot water containing approximately 10% vinegar, wait for 30 minutes, then scrub the inside gently with a soft brush, rinse out thoroughly, and dry.

(Storage)

If you do not intend to use this product for a long period of time, wash it to remove any dirt, dry it thoroughly, and store it in a cool, dry area.

- ① Turn the lid upside down.
- 2 Firmly pinch the tabs in the center inward (as shown in the diagram), then press them downward to remove the top part of the lid.
- ③ After washing the parts, let them dry completely, then insert the two tabs into the center hole, pressing firmly until you hear a click. This indicates that the parts have been reassembled properly.

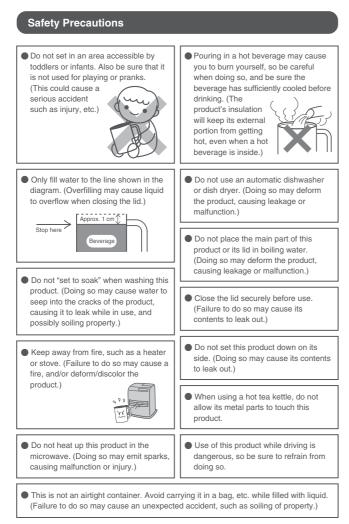

Please note that, if these precautions are not followed correctly, our company will not be held responsible.

Troubleshooting


Inspect the product as follows. If none of these actions apply, please contact the store of purchase

Symptom	Inspection	Action
Leakage from lid	Are the lid and mouthpiece securely closed?	Securely close it again.

* This is not an airtight container. Laying the product on its side may cause its contents to leak out.

Stainless Steel Mug with Dual-Layered Vacuum Lid

Thank you for purchasing the stainless steel mug with dual-lavered vacuum lid. Please read through these instructions carefully for proper handling before use. Be sure to store this instruction manual for future reference.

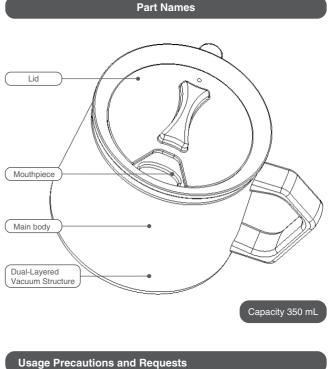

Safety Precautions

Never fill the product with the following:

Drv ice, carbonated drinks, etc.

- (Internal pressure may increase, so that the lid can no longer be opened, or contents could spray out.)
- Milk, beverages containing milk, fruit juice, etc. (The ingredients could spoil.)
- Salty soups, such as miso, etc. (Salt may cause the product to rust.)
- Pulp. tea leaves, etc.

(This may lead to product malfunction such as leakage, etc.)



Do not subject the product to significant shock by dropping it or hitting it against something. (Doing so may damage the product by denting its outer shell.)




Do not use chlorine bleach. change in quality, or cause it to spoil.)

- Do not store in the freezer. (Doing so may deform or damage the product.)
- please refrain from doing so.

How to Use

upward to open, as shown in the

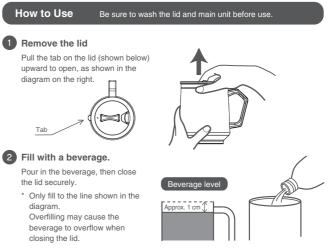

2 Fill with a beverage.

Pour in the beverage, then close

 
- * Only fill to the line shown in the
- Overfilling may cause the beverage to overflow when

in advance, pre-heating (or pre-cooling) it.

<TFKC350>

User Manual

Do not use paint thinner, benzine, metal scrubbers, polishing powder, cleansers, etc. (Doing so could scratch the product, causing it to malfunction)



If the product's opening is deformed due to dropping it etc., please refrain from using it.

Do not keep contents in the product for a long period of time. (Doing so may lead to a

Removing the handle or attempting to disassemble this product is dangerous, so

Use the product more efficiently by filling it with a small amount of hot (or cold) water

Then empty that water and fill the product with new hot (or cold) water.