


### Battery compartment

Each battery powers a different function.

\* The voice alarm snooze function will operate when three batteries are inserted.

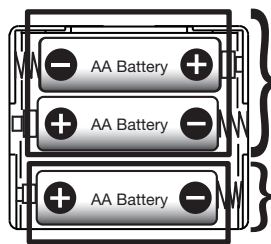

These two batteries power the light and voice alarm function.

This battery powers the clock hands, bell alarm function, and bell alarm snooze function.

### Inserting batteries

- Remove the cover of the battery compartment, located underneath the clock base, by pulling it towards you, then insert three AA dry cell batteries as indicated by the (+) / (-) signs shown inside the compartment.

### Product Care

- To clean the clock, wipe it down with a soft cloth.
- Do not use benzine, paint thinner, or polishing powders/detergents.

### Product Specifications

Time precision : Accurate within +/-30 seconds per month (at normal temperature)  
 Temperature range for use : -10 to +50 deg. C  
 Batteries required : AA dry cell batteries x 3 (sold separately)

### CAUTION Read carefully before use.

#### <Batteries>

- \* Be sure to change dead batteries quickly to avoid leakage. Battery leakage may damage the clock or soil surrounding furniture, etc. incurring costs for repairs. Take the following measures to prevent battery leakage, heat, or damage.
- Improper use of dry cell batteries may cause leakage, unwanted heat, or damage.
- Do not use rechargeable batteries with this product.
- Insert batteries with the plus/minus sides properly aligned.
- Do not mix different types of batteries for use, such as old and new.
- Do not short, recharge, disassemble, or heat up the product, and do not expose it to fire.
- If the clock stops working, or the alarm no longer activates, quickly replace batteries with the correct type, or remove the batteries completely.
- Replace them once a year even if they continue to work.

#### <Area of use>

- \* Refrain from using this product in the following areas, which could cause malfunction.
- Areas where frequent vibrations or hard shocks often occur, or moist areas such as bathrooms, etc.
- Areas with a strong magnetic force, or where lots of dust accumulates
- Areas in direct sunlight
- Areas where exposed to direct wind from heater

#### <Functions>

- When setting the clock or alarm, turning the appropriate knob in the opposite direction of the arrow may cause the time or alarm to function slower than normal. So be sure to turn each knob in the proper direction.

### Setting the time

- Turn the time adjustment knob in the direction of the arrow (counterclockwise) to set the time.

### Setting the alarm

- ① Slide the alarm's ON/OFF switch to its ON position.
- ② Turn the alarm knob in the direction of the arrow (counterclockwise) to align the alarm needle with the time you would like it to activate.

#### <Bell alarm> (electronic sound)

Slide the Bell/Voice Alarm toggle switch downward.

#### <Voice alarm> My Melody's phrases

Slide the Bell/Voice Alarm toggle switch upward.

- Good morning. If you sleep in, I'm gonna tickle you ♪
  - May you be happy and healthy today. Melody will always be with you ♪
  - Come on, wake up. A new day is about to start ♪
  - What kind of weather are we having today?  
Look up at the sky and take a nice, deep breath ♪
  - Get up! It's morning now! Switch on your motivation with a smile!
- ③ To stop the alarm, slide ON/OFF switch to the OFF position.

### Snooze function

- Pressing the LIGHT / SNOOZE button while the alarm is activated will put the alarm into snooze mode.
- The alarm is shut off, but will be activated again about 4 minutes later.
- To turn off the alarm completely, slide the ON/OFF switch to the OFF position.
- The snooze function can be used for about 30 minutes from when the alarm is first activated. This varies slightly depending on the time setting.

### LIGHT / SNOOZE button

- Press this button to turn on the light.
- The light can be switched on approximately 15 thousand times.
- However, the light cannot be replaced.